


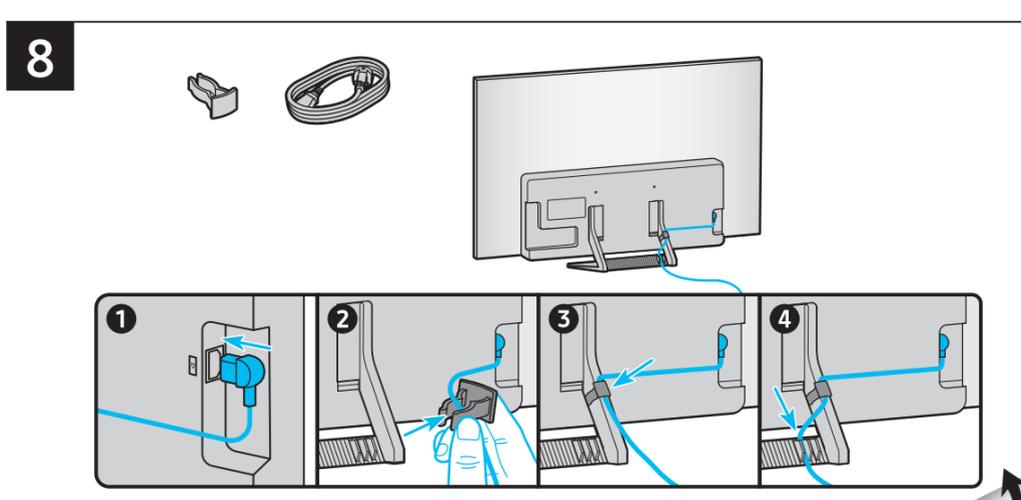
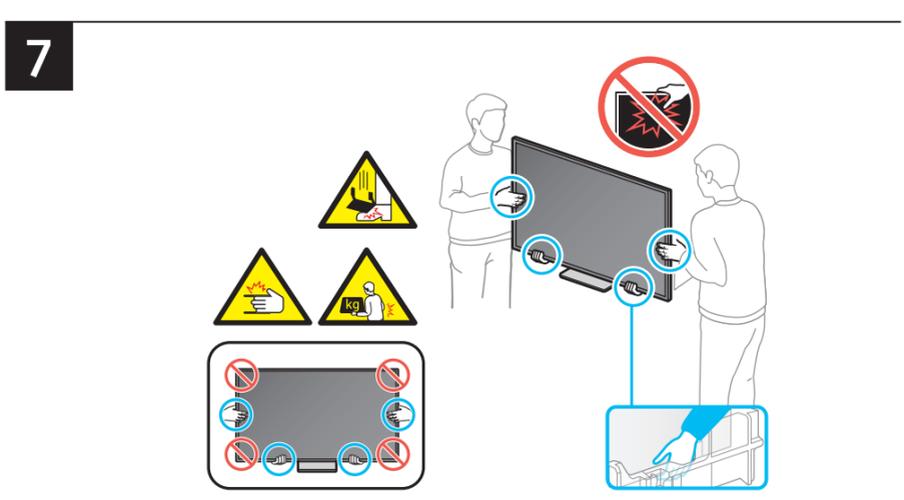
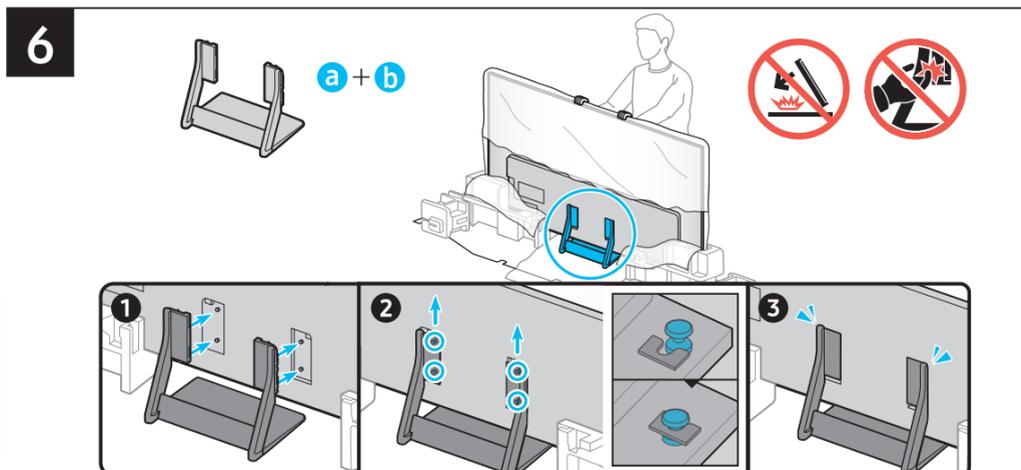
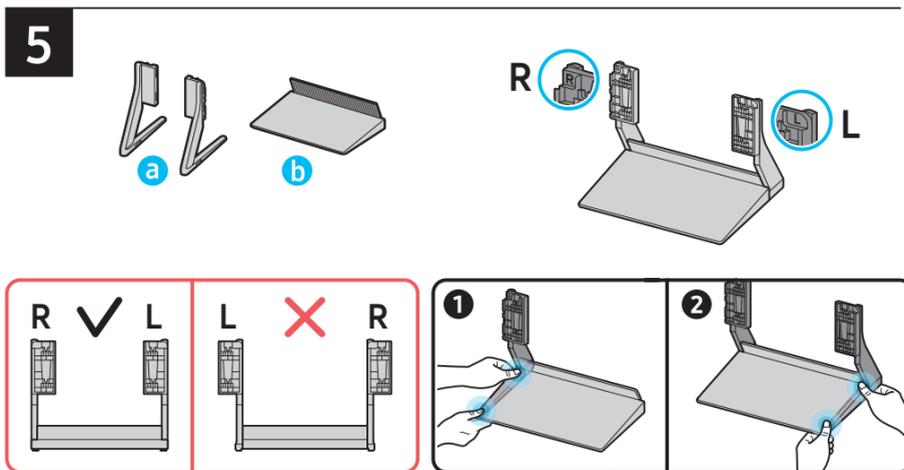
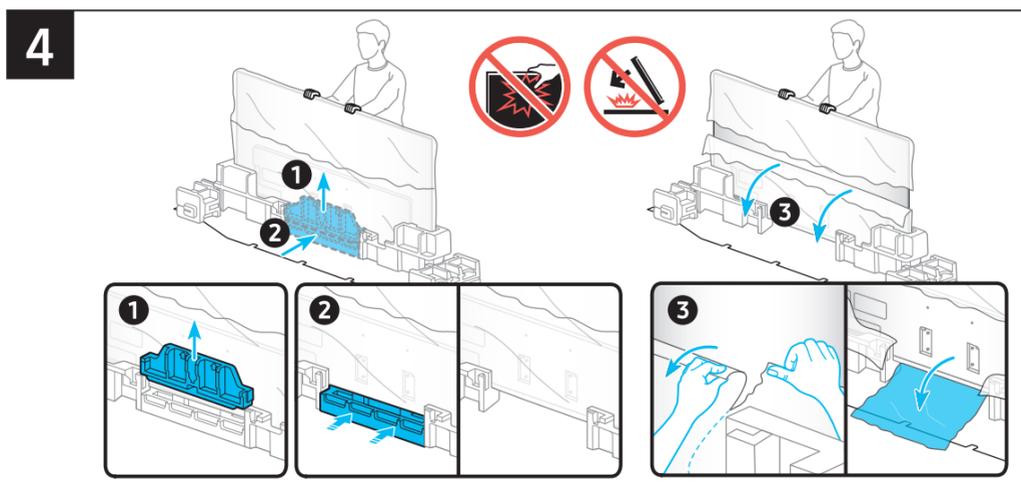
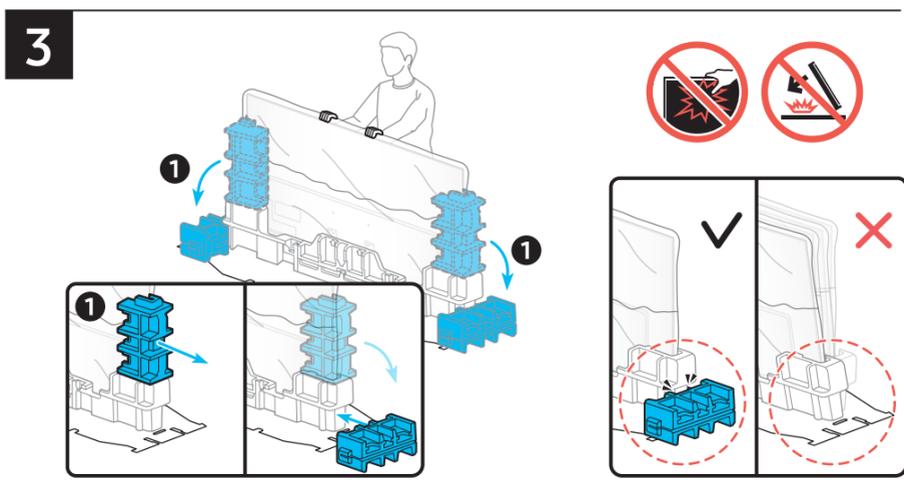
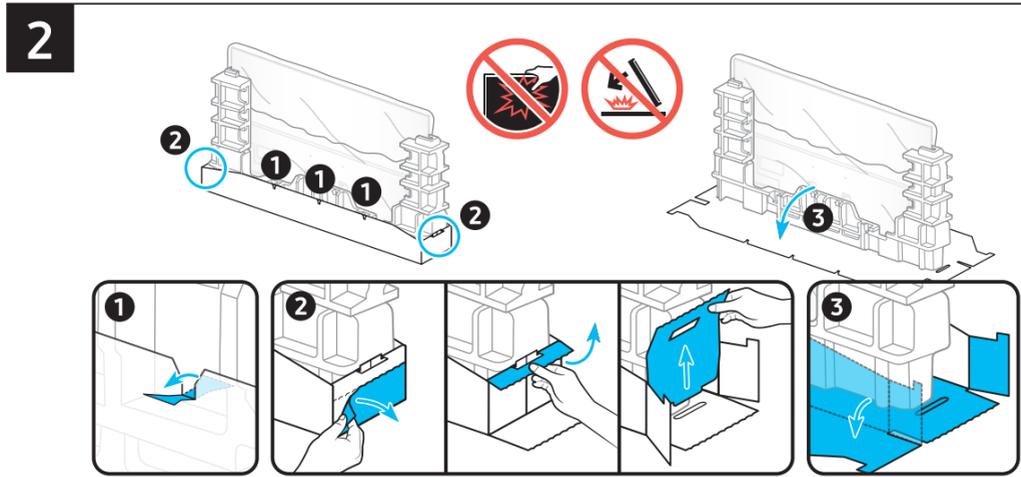
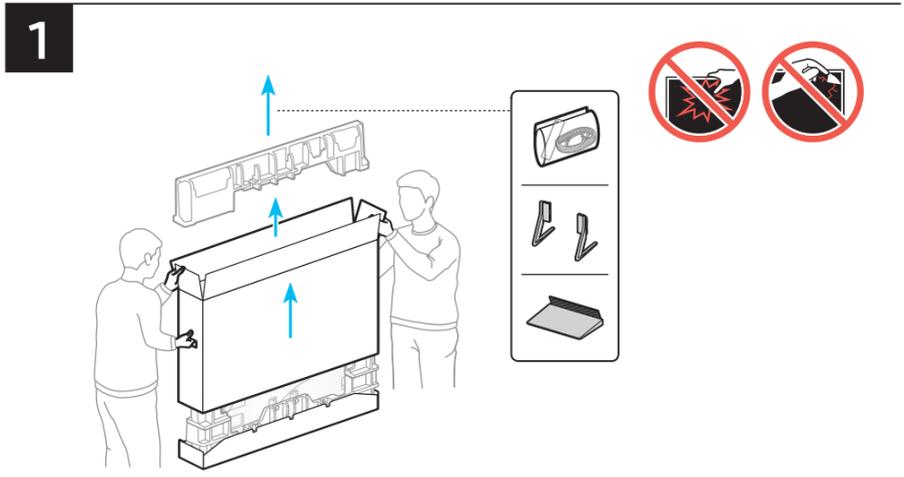
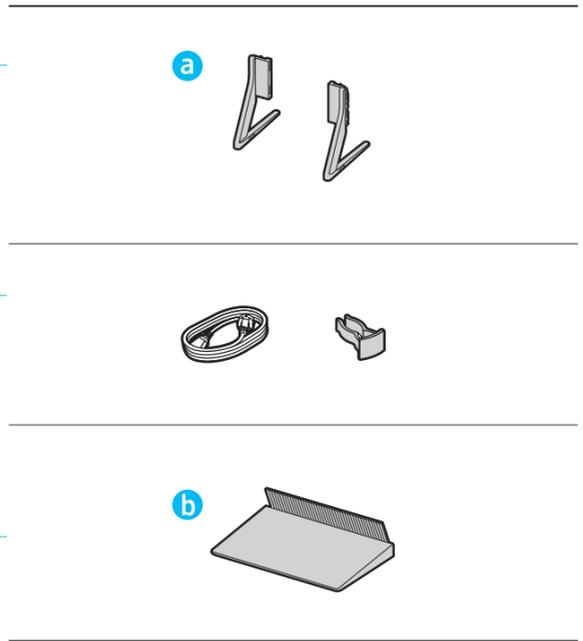


SAMSUNG

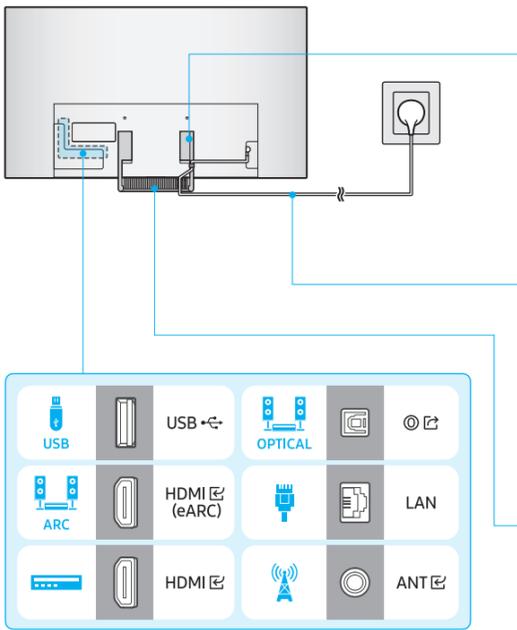


Unpacking and Installation Guide
 Guide de déballage et d'installation
 Guía de desembalaje e instalación
 Manual de desempacotamento e instalação
 Auspacken und Installationsanleitung
 Guida al disimballaggio e all'installazione
 Руководство по распаковке и установке
 Қаптамадан шығару және орнату нұсқаулығы
 Посібник з розпаковки та встановлення
 Qadoqdan chiqarish va o'rnatish qo'llanmasi

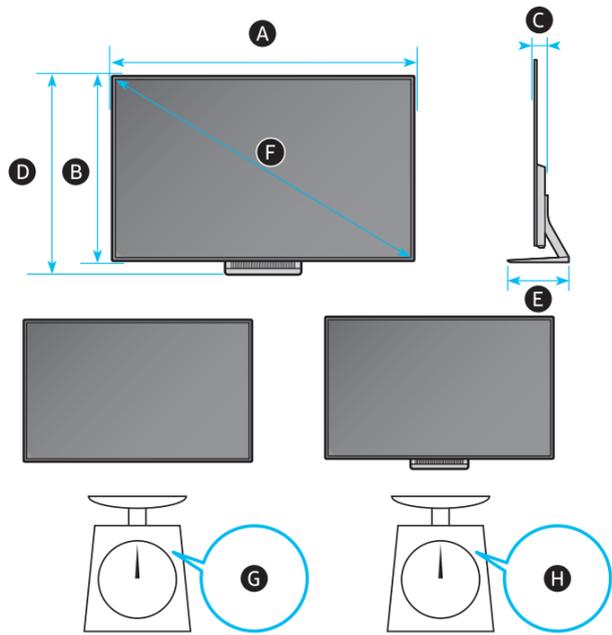

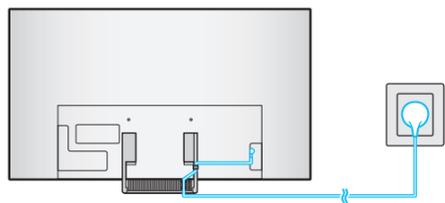

	A	B	C	D	E	F	G	H
77S9*D	67.7 inches	38.9 inches	1.8 inches	41.7 inches	14.1 inches	76.8 inches	76.7 lbs	80.7 lbs
77SD9*	(1718.5 mm)	(987.6 mm)	(44.9 mm)	(1058.6 mm)	(359.0 mm)	(195 cm)	(34.8 kg)	(36.6 kg)
77S9*F	(1718,5 mm)	(987,6 mm)	(44,9 mm)	(1058,6 mm)	(359,0 mm)	(195 cm)	(34,8 кг)	(36,6 кг)
77SF9*	(171.85 cm)	(98.76 cm)	(4.49 cm)	(105.86 cm)	(35.90 cm)	(195 cm)	(34,8 кг)	(36,6 кг)

*: 0-9, A-Z

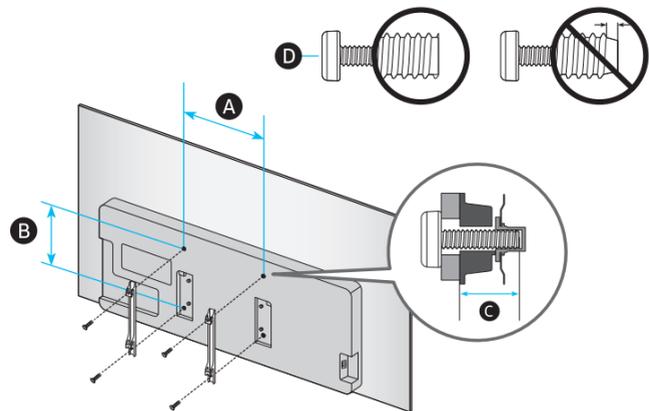

	VESA A x B (mm) VESA A x B (mm)	C (mm) C (mm)	D x 4
77S9*D 77SD9* 77S9*F 77SF9*	400 x 300	28-30	M8

*: 0-9, A-Z