


REVELATION  
by UTTERMOST  
ASSEMBLY INSTRUCTIONS

Illustration for Portable version

ITEM NO: R22555

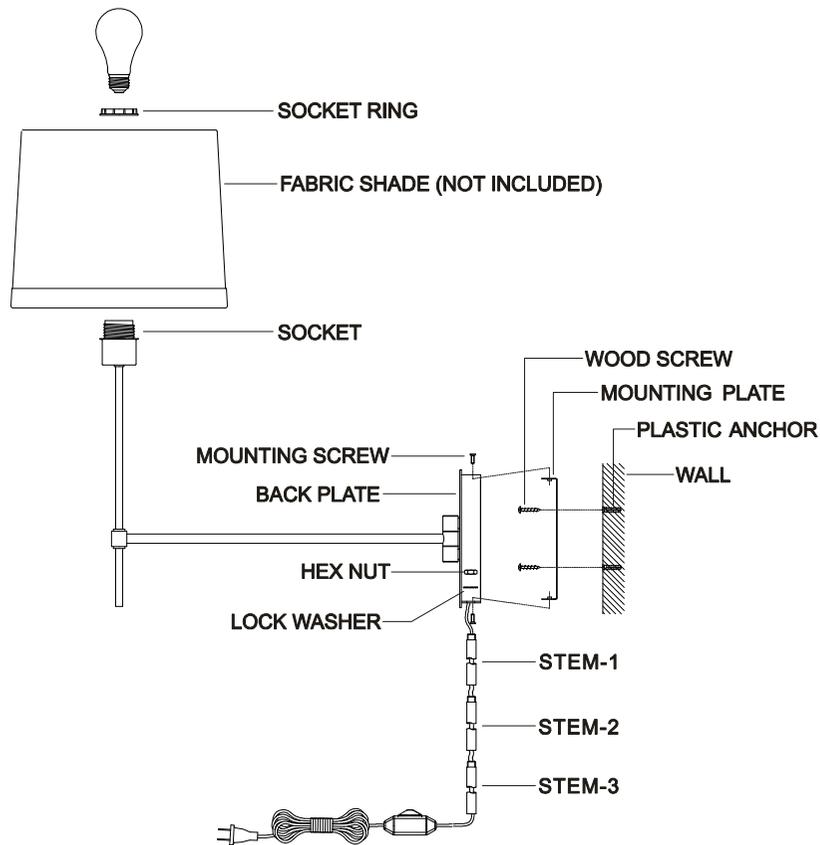

P.O. Box 558 | 3325 Grassy Hill Road | Rocky Mount, VA | 24151

[www.uttermost.com/Revelation](http://www.uttermost.com/Revelation)

REVELATION  
by UTTERMOST  
ASSEMBLY INSTRUCTIONS

ITEM NO: R22555

**WARNING:**

TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF WHILE POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

**We suggest a licensed professional electrician for installation**

**FOR PORTABLE INSTALLATION ILLUSTRATION**

1. Turn power off at fuse or circuit box before starting installation process.
2. Carefully unpack your new fixture and lay out all the parts on a clear surface.
3. Insert the nipple of Stem-1 into hole in front plate, then place the Lock washer over the nipple, then secure with the Hex nut.
4. Thread the Stem-2 into the Stem-1, Stem-3 into the Stem-2.
5. Position the Mounting plate through the fixing holes onto the wall and make marks, drill pilot holes for Wood screws into the wall, then insert the Plastic anchor into the holes.
6. Secure Mounting plate to Outlet box with Outlet box screws, then secure the outlet box with wood screws into Plastic anchors in the wall.
7. Mount the Back plate over the Mounting plate and then secure it with Mounting screws.
8. Slide the Fabric shade (not included) over the Socket, then secure with the Socket ring.
9. Install the light bulb (Not Supplied) in accordance with the fixture's specifications. **DO NOT EXCEED THE MAXIMUM WATTAGE RATING!**


P.O. Box 558 | 3325 Grassy Hill Road | Rocky Mount, VA | 24151

[www.uttermost.com/Revelation](http://www.uttermost.com/Revelation)

REVELATION  
by UTTERMOST  
ASSEMBLY INSTRUCTIONS

Illustration for Sconce version

ITEM NO: R22555

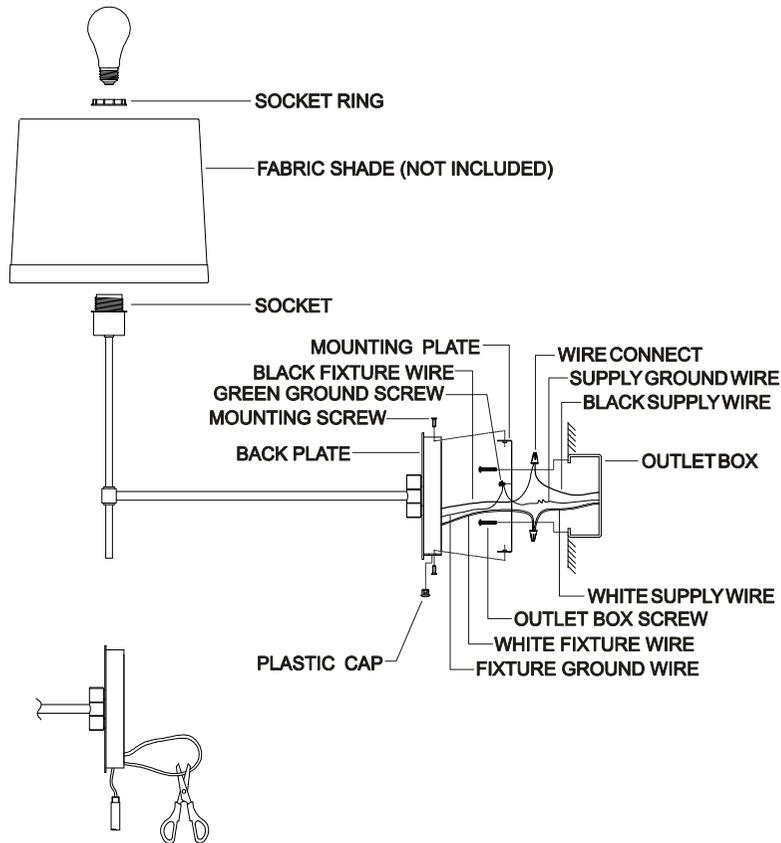

P.O. Box 558 | 3325 Grassy Hill Road | Rocky Mount, VA | 24151  
www.uttermost.com/Revelation

REVELATION  
by UTTERMOST  
ASSEMBLY INSTRUCTIONS

ITEM NO: R22555

**WARNING:** TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF WHILE POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

**We suggest a licensed professional electrician for installation**

**FOR DIRECT WIRE SCONCE INSTALLATION ILLUSTRATION**

1. Turn power off at fuse or circuit box before starting installation process.
2. Carefully unpack your new fixture and lay out all the parts on a clear surface.
3. Please cut off the plug wire then remove the plug wire. (The length of the fixture wire is not less than 6").
4. Install Plastic cap into hole of Back plate.
5. Secure the Mounting plate to the outlet box with the Outlet box screws.
6. Make Wire connections with Wire Connector:
  - The smooth wire (w/ marking) from fixture to Black Wire from power source.
  - The ribbed wire (w/o marking) from Fixture to White Wire from power source.
  - Attach the Ground Wire and house ground wire to the Mounting plate with the green Ground screw.Carefully tuck wires back into the Outlet Box.
7. Mount the Back plate over the Mounting plate and then secure it with Mounting screws.
8. Slide the Fabric shade (not included) over the Socket, then secure with the Socket ring.
9. Install the light bulb (Not Supplied) in accordance with the fixture's specifications. **DO NOT EXCEED THE MAXIMUM WATTAGE RATING!**

P.O. Box 558 | 3325 Grassy Hill Road | Rocky Mount, VA | 24151  
www.uttermost.com/Revelation